

New DD Connectors

B-TEK now offers connectors to make your DD indicator installation even easier. Each DD indicator and multi-scale input will now include a DB to Terminal strip connector for the home run connection at no cost. This eliminates the need to solder connections on site. Click on links to view web pages.

[899-100221](#) Digital Scale Input




[899-100222](#) Analog Scale Input



We also added communication connectors and adaptors that can be purchased.

[899-100225](#) DB9 Male
Use for RS232/RS422 connections

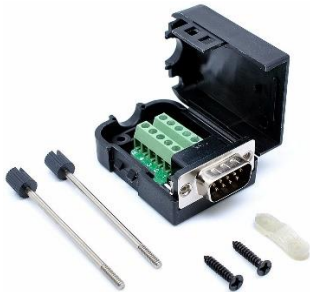

[899-100223](#) Male to Female Null Modem
Connect DD 232 port directly to USB/Serial
Convertor



[899-100224](#) DB9 Female to Female Null Modem
Connect USB/Serial to USB/Serial Convertor



[899-100212](#) Single [899-100211](#) Dual
[899-100210](#) Quad USB to Serial Convertor
[899-100270](#) USB to RS422 Converter



[835-300014](#) RS232 Printer Cable; DB9 Male - DB25 Male (DD & TM295)